MAINTENANCE TIPS

Alpha Workstation

- The Alpha Workstation is made with durable co-polymer material which is easy to clean and maintain.
- Wipe down surfaces after each shift with a multi-purpose cleaner or disinfectant using a microfiber cloth.
- For deep cleaning, the Alpha Workstation components can be removed separately.

Equodose Mobile Microfiber Charging System

- The Equodose Mobile Microfiber Charging System is made with durable co-polymer and other materials which make it easy to clean and maintain.
- The sealed tank system enables leftover cleaning solution to be stored in the tank. However, from time-to-time, a more in-depth cleaning should be performed.





TANK MAINTENANCE:

Periodically, rinse the Equodose tank with water and wipe with microfiber cloth. Wipe with a microfiber cloth the feed valve, located at the bottom of the tank.

Air dry the tank upside down.





PUMP MAINTENANCE:

After removing the tank, the pump mechanism is exposed. Periodically, use a mini-brush to clean the valve and wipe all internal surfaces with a microfiber





OVERALL MAINTENANCE:

To keep the tank and pump operating smoothly, periodically perform a system flush by filling the tank with water and keeping the lever depressed until the tank

Biofilm can form in areas that come into contact with cleaning solution. Therefore, it is beneficial to rinse the tank with a product which is formulated to eliminate microbials, such as a bleach solution or quat disinfectant.



To promote longevity, it is recommended after each shift to detach the tank from the pump to avoid continuous contact with cleaning solution and let the mechanism air dry. Depress the lever to drain the solution reservoir into the tray. Empty tray and wipe clean.





FILMOP® USA LLC. | 13410 Highway 105 West | Conroe, Texas 77304 Toll-Free: 888 741 0707 | e-mail: info@filmopusa.com


www.filmopusa.com

Alpha & Equodose Parts Replacement & Maintenance Guide





ALPHA FOLDABLE BAG HOLDER PARTS

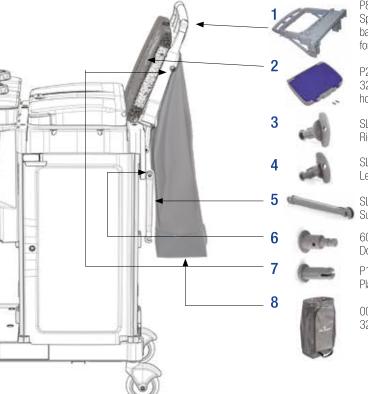

Space Saver 32 gallon Plastic Bag Holder Frame (male) w/ push bar, bag stretchers, bag hooks, handle & dust pan supports; slots for pistons; dark gray.

32 gallon Bag Holder Cover w/lockable compartment, check-list holder; gray/blue.

Right Key for 32 gallon Space Saver Bag Holder Right Support Arm; gray.

Left Key for 32 gallon Space Saver Bag Holder Left Support Arm; gray.

Support Arm for 32 gallon Space Saver Bag Holder; gray.

Double pin male/female for support arm.

Plastic Pin for 32 gallon bag holder cover.

32 gallon bag, gray w/ grommets & zipper (for easy trash removal).



ATTACHMENT / HANGING PARTS



4 1/4" Hanging Bar for dome (short, in front of door) for use with UNI-Move only; gray.



5 1/2" Hanging Bar for 40 gallon bag holder (long). To hang floor signage and use with UNI-Move.



4 1/4" Hanging Bar for dome (short). To hang floor signage and use with UNI-Move.



P1909901U

1" Hanging Bar for use with UNI-Move.



UNI-Move Handle Hang Holder for .8"-1.5" diameter telescopic poles/handles; gray.

ENCLOSED BAG HOLDER PARTS



Cover for 40 gallon bag holder with lockable compartment / check-list holder; gray/blue.



Plastic 40 gallon Bag Holder (male) #1P8169905U complete with screws, washers, plugs; dark gray.



P2909912U

Divider insert for 40 gallon bag holder.



Plastic Pin for 40 gallon bag holder cover.



37.4"/5" Wheel Metal Rod for foot pedal mechanism only.



Plastic Pin for assembling pedal kit; dark gray.



P1909915U

Foot pedal for Alpha Workstations

MISCELLANEOUS PARTS



Door Latch with hidden key compartment.



0000SM00231

Door Lock Mechanism for Alpha Workstations complete w/ hardware (1 screw item# 30084)



P1909904U

1" insert to close slots for attachments.



Plastic 0.63" (16mm) diameter plug for bag holder, upper central tray, closing insert; gray.



Hydraulic piston for lids and covers.

DOME & LID PARTS



P5199903U

Dome Frame without lid with plugs, pistons; gray.



Lid for dome, complete with locking mechanism,

2 pins, key; gray.

Dome Frame w/ lockable lid complete with plugs, pistons; dark gray.



0000SM00232

Dome cover lock mechanism for Alpha Workstation compete with hardware (1 screw item#30084).



46

47

24011298

(front), co-polymer.

for 12.5" base extension.

5" diameter Fixed Wheels Rod.


SLZ0960000005

5" Swivel Ball Bearing Wheels for base

5" Swivel Ball Bearing Wheels, co-polymer,

20

0000SLP95002U Pin for fixing Alpha dome cover, item# P3199903U.

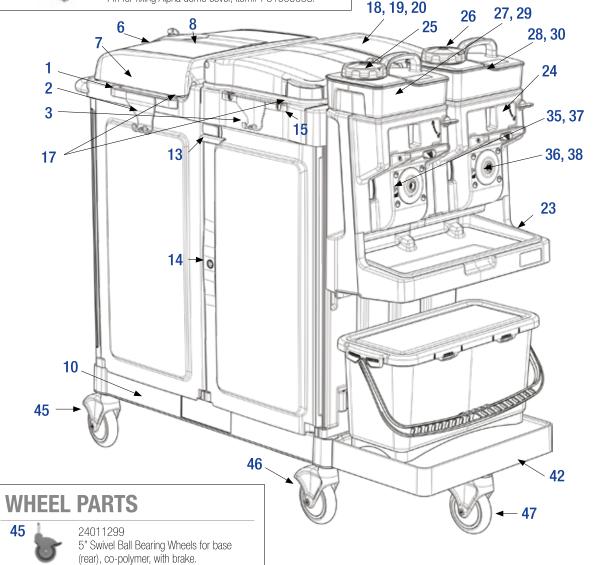

EOUODOSE® PARTS



Tray for Equodose; blue.



P110006U Front Shell, single tank Equodose;



Lockable lid for Equodose tank complete w/ key; blue.



Lockable lid for Equodose tank complete w/ key, gray.



EPDM Equodose single tank 1.5 gallon, lockable cap; blue.



P210017TU EPDM Equodose single tank 1.5 gallon, lockable cap; gray.



P210022TA VITON-B Equodose single tank 1.5 gallon, lockable cap; blue.



P210022TU VITON-B Equodose single tank 1.5 gallon, lockable cap; gray.



SLP093000011U EPDM Equodose tank valve.



SLP0930000038 VITON-B Equodose tank valve.



SLX093000003H EPDM Equodose tank valve o-ring.



SLX093000011G VITON-B Equodose tank valve o-ring.



EPDM Equodose pump complete, blue lever, 2-12 oz. dosing dial.



EPDM Equodose pump complete, gray lever, 2-12 oz. dosing dial.



VITON-B Equodose pump complete, blue lever, 2-12 oz. dosing dial.



VITON-B Equodose pump complete, gray lever, 2-12 oz. dosing dial.





10" wide Side Basket; dark gray.



P2191102U

5" wide Side Basket; dark gray.



16.5" Base Extension w/ two non-marking 5" diameter wheel; dark gray.



12.5" Base Extension w/ one non-marking 5" diameter wheel; dark gray.



3.5" Base Extension; dark gray.

8.75" Base Small Extension; dark gray.

KEY MANAGEMENT





0000SM00633

Complete Set: 1 Lanyard, 1 Retractable Key Ring, 5 Universal Locking Keys.



5/16" Equodose Locking Key with tabs, co-polymer; gray.



0000SM00634 Complete Set: 1 Retractable Key Ring, 5 Universal Locking Keys.



